

Non-Carbonated Backpack

Troubleshooting

Problem: NO liquid comes out of the dispensing hose

- Regulate the flow of liquid by adjusting the knob at the left side of the dispensing gun. Turn the screw counter-clockwise to increase the flow.
- Make sure dispenser hose (black quick disconnect) is properly connected (locked) to the "out" valve on the beverage tank.
- Is the Hand Pump for pressurizing the keg attached properly. You might not have enough pressure to push the product out.
- Was beverage concentrate properly mixed? Thick Syrups and powders can clog the lines if not properly diluted.
- If coffee was dispensed, remove all coffee grounds.
- If nothing else works, dismantle the dispensing hose/gun and remove quick disconnect fitting - FLUSH WITH WATER.

Problem: The beverage tank won't hold pressure.

- Is lid and gasket securely in place?
- Is the "gas release" valve on the beverage tank closed?
- Are the quick disconnect fittings (IN and OUT) securely fastened?

Problem: The dispenser hose leaks.

- If leak comes from the base of the dispenser gun, dismantle gun and tighten fittings.
- If leak comes from black quick disconnect fitting, tighten fitting.
- If leak comes from inside the insulation, return hose to Keg Club, Inc. for repair or replacement.

